

Special Cameras

RCP003

QUICK REFERENCE GUIDE

RCP 003 allows two modes of configuration. STANDARD mode, automatically configures the connection with X5A mini cameras (FIELD BOX), and ADVANCE mode, allows manual configuration with other compatible cameras.

ADVANCE mode its only available by request.



ALL PHOTOS SHOWN ARE ILLUSTRATIVE ONLY AND ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS


STANDARD MODE




1. Press SETUP; Select the option RCP



2. Select the option Camera & network connections

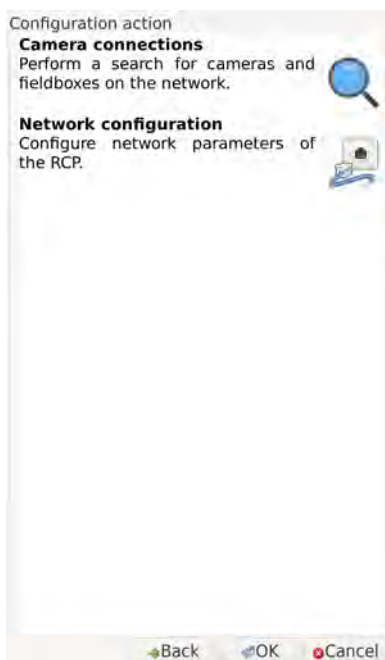

3. Press on touch screen the  search button



4. RCP 003 will now search and connect to available minicams X5A on network. In this example, 3 FiedlBox were found

RCP003

REMOTE CAMERA CONTROL PANEL



STANDARD MODE



5. When selected on touch screen, the first FieldBox discovered turns blue



6. Select the desired position cam to address (in this case we choose position 1)



7. Cam's assigned to position 1,2 and 3
Press OK to go to main screen



8. Cameras 1,2 and 3 are now configured and ready to use

RCP003

REMOTE CAMERA CONTROL PANEL

Q4S[®]
Special Cameras

Q4S[®] Family products compatible cams



Q4S[®] MiniJib with Ronin Head
MiniCam X5A & X5C



Q4S[®] MiniCam X5U
Underwater & Image control



MiniCam AtomOne 4K 16 **MiniCam AtomOne**
mini / AIR / WaterProof



MiniCam Atom SSM500
Up to 500 fps & Remote Iris



MiniCam AtomOne mini Zoom
Smallest zoom broadcast camera

Marshall
BROADCAST & PRO AV



Marshall CV420-CS 4K60 12GSDI

Z CAM



Z CAM E2-M4 - 4K Ultra HD Micro Four Thirds Mount

Panasonic



Panasonic AW-UE150K 4K / UE100
And a large of others generic Robotic PTZ Camera

VISION
RESEARCH

hymotion



Vision Research Phantom V64x; Miro

Blackmagicdesign



BMD Studio; mini URSA; micro Studio &
BMD Teranex

STANDARD MODE

ADVANCED MODE




RCP003 CONNECTOR QUICK REFERENCE


In 1-5 GPI In - (Tally) DC 3V to 30V any polarity

Out 1-5 GPI Out - Relay contact output Max 1A-30V

1. GND for RCP003 Power
2. +12V power output pin - to be used for tally input if needed (fuse protected holding 500mA Tripping 1A time 0.8sec)
14. +12V for RCP003 Power can only be used as an input, not a power output

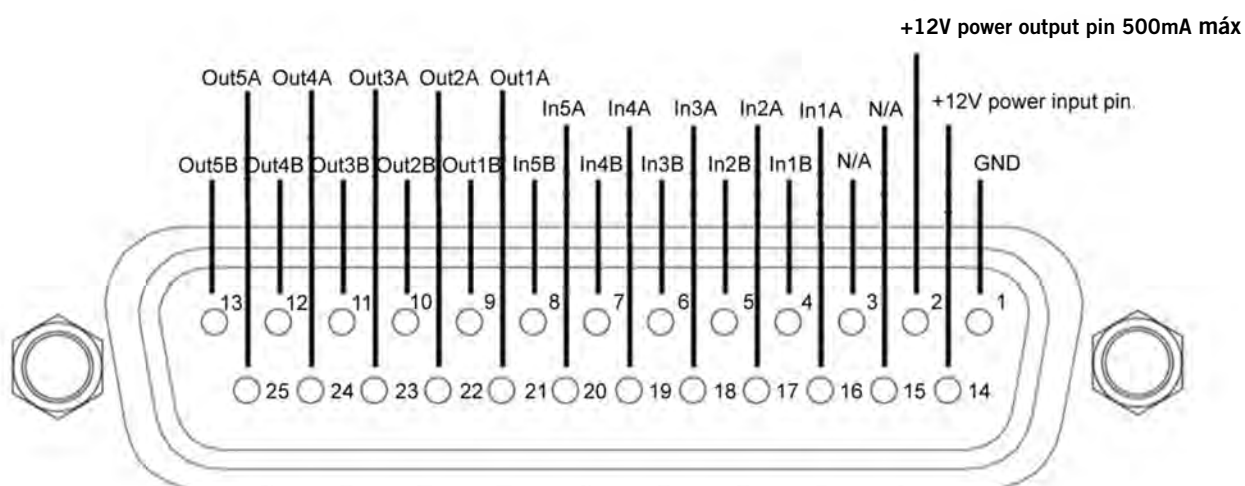

RCP003 back D-SUB 25P connector

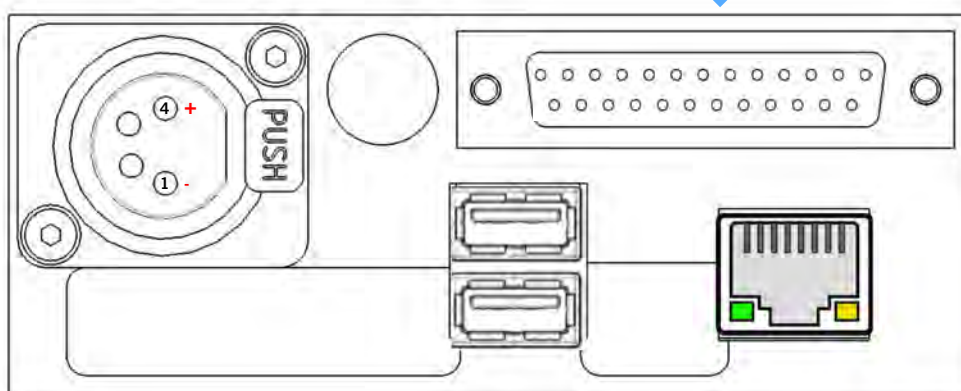

RCP003 back connectors